

How to adjust power putput for FU-05B 0.5W FM transmitter and FU-7C 7W FM transmitter?

1. Connect Antenna.
2. Press and hold the power button.
3. Connect power supply.
4. The screen will show H or L. Then adjust it to the power level you need.
5. Press power button to confirm.